

AUDIO INSTRUCTIONS

NB: Make sure the PA and bluetooth speakers are both plugged into the power board and that it is turned on at the wall socket.

Please turn everything down and off when you are finished!

Using the Bluetooth Speaker

NB: These instructions are for the bluetooth speaker ONLY. To connect from the bluetooth speaker to the speakers on the wall, see bluetooth instructions under PA below.

To connect via Bluetooth:

1. Press the red power button on top of the speaker
2. On top of the speaker, press the source button (the arrow pointing into a box) until the light is on 'bluetooth'. Leave it alone if it is already on 'bluetooth'.
3. Press the blue flashing bluetooth button on the back of the speaker
4. On your phone, go to bluetooth settings > add new device
5. Select "[AV] MX-ST9B Series" from the device list
6. Play music and adjust volume with the + and - buttons on the top of the speaker.

To connect via the aux cord:

1. On top of the speaker, press the source button (the arrow pointing into a box) until the light is on 'AUX1'
2. Connect the loose cord (red and black ends into a 3.5mm jack adapter) at the back of the speaker to your device
3. Play music and adjust volume with the + and - buttons at the top of the speaker

Using the PA

Before starting:

Set the LEVEL knobs (the grey line of knobs across the middle) to 0 BEFORE turning on!
Check that all green knobs are pointing straight up (5), and that all remaining blue, white and yellow knobs are all the way down (0).

Also - the speakon inputs can be testy. If no sound, move the cable slightly at the back of the PA while testing until the sound engages.

To use the microphone:

NB: Find the microphone and lead in the audio cabinet on the stage. Find the mic stand under the stage behind the hessian lining.

1. Plug the microphone cable into the channel 1 input at the bottom left hand corner.
2. Turn the red MASTER LEVEL knob up to 4
3. Turn the white channel 1 LEVEL knob up to 4 and adjust from there.

Apply the same instructions to using other channels for microphones or instruments (check MIC (XLR cable) / LINE (1/4" jack) button is at the correct level to avoid feedback).

To connect to the bluetooth speaker:

1. Ensure the black and red cables coming out of the back of the bluetooth speakers are connected to the inputs under Channel 11/12.
2. Follow instructions above to operate the bluetooth speaker
3. Turn the red MASTER LEVEL knob up to 4
4. Turn the white channel 11/12 LEVEL knob up to 4 and adjust from there.

To use the foldback speaker:

NB: Find the foldback speaker under the stage behind the hessian lining.

1. Plug the loose cable at the back of the mixer (AUX1) into the back of the foldback speaker.
2. Turn the blue MASTER LEVEL for AUX1 to 4
3. To send channels to the foldback speaker - adjust the blue AUX1 level knobs on each channel as desired.

For all other PA enquiries - check the manual at the QR code or text Dave on 0400532326.

PA Instruction manual QR Code!!!



Please put gear back where it belongs!

Microphone and cable in the audio cabinet
Microphone stand, foldback speaker under the stage